

# How to Replace an Overhead Projector Bulb

By Jane Rhoades

3M 1700

Position the overhead in a secure location. Unplug and let cool.



Locate and depress the button on the side to expose the bulb.



Locate the bulb assembly.


Find the bulb ejection lever on the side of the assembly.

Gently lift the lever to release the bulb.

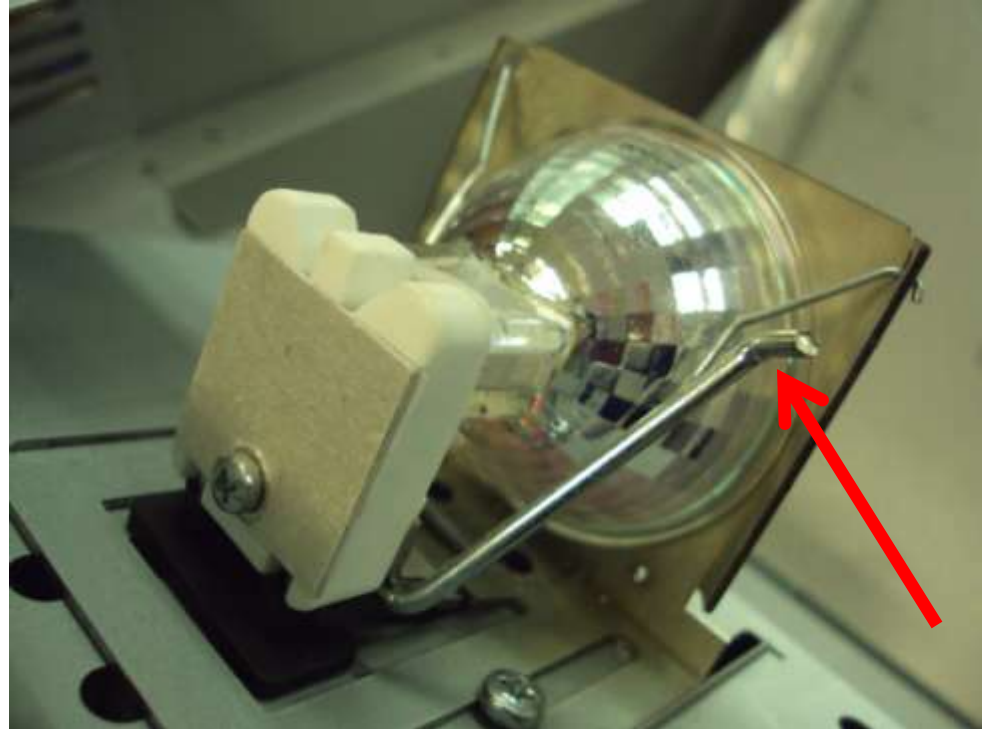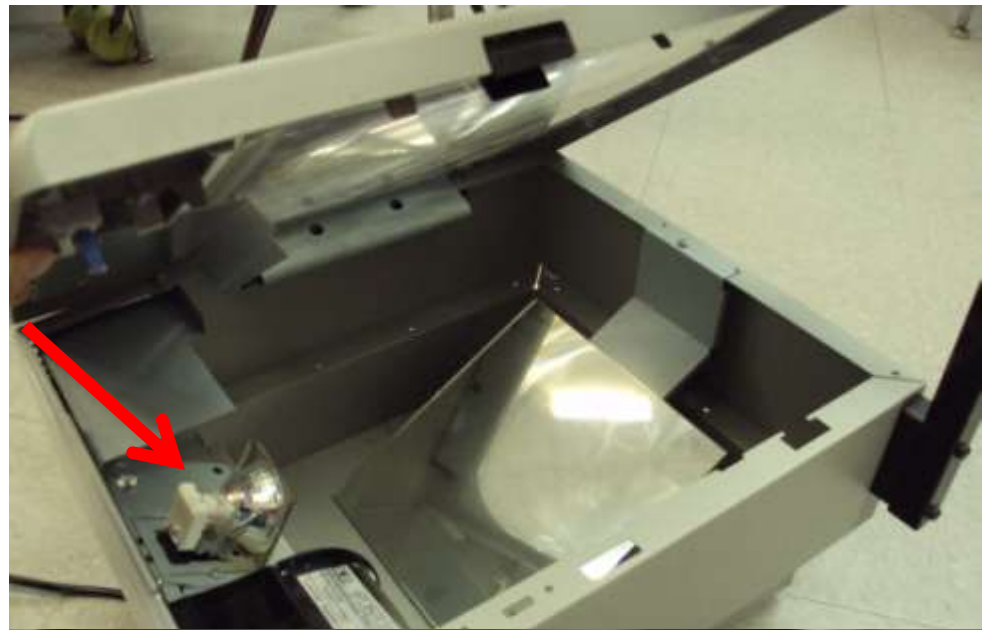


Gently slide out the broken bulb and discard.

Carefully handle the replacement bulb with a tissue or paper towel to keep oils from contacting the bulb.

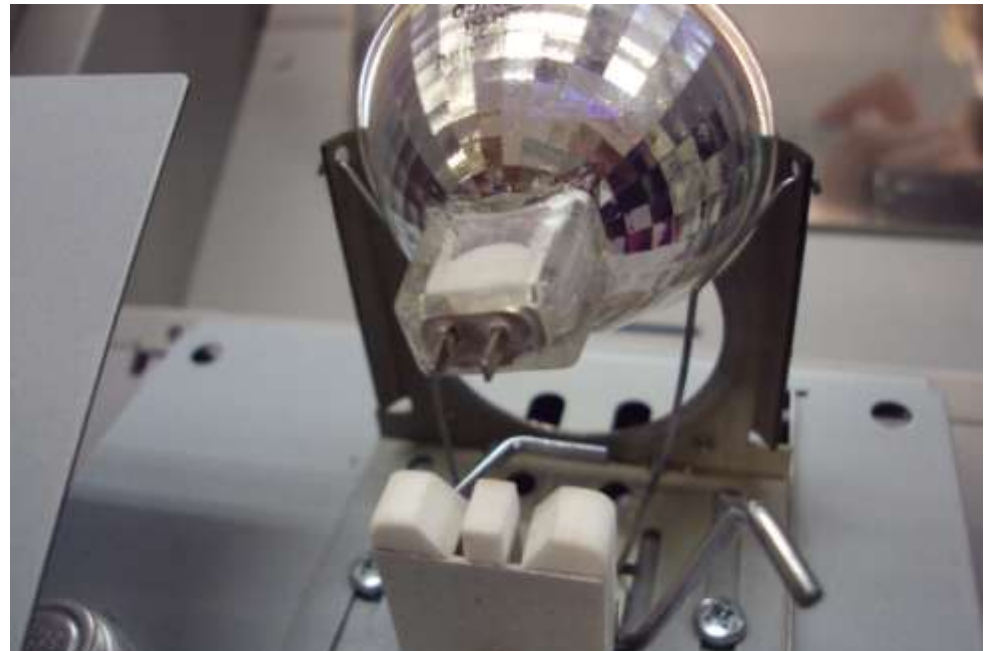

Carefully align prongs and slide the replacement bulb into place. You will need to guide the bulb and help reset the release handle.

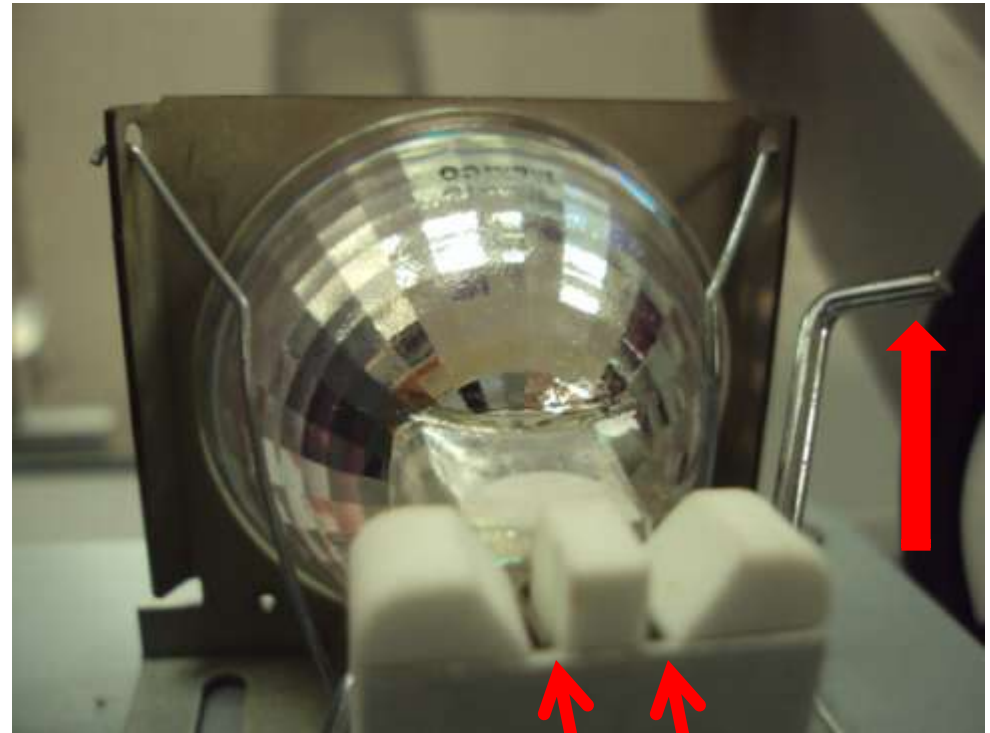

prongs

Close the lid.  
Plug in and test  
the new bulb.  
Carefully move the  
overhead projector  
to desired location  
and continue use.

Remember to turn  
off the lamp when  
not in use to  
extend the life  
of the bulb.

