

# Using 3M 1830 Overhead Projector


## Before You Begin

The 3M 1830 overhead projector is an easy to use, sturdy device.



## Getting started


1. Plug in power cord. (Assure loose cord is not creating a tripping hazard.)
2. Press the power button.
3. Place material on the Fresnel lens.
4. Focus image by using the focusing knob and adjusting the projection lens.

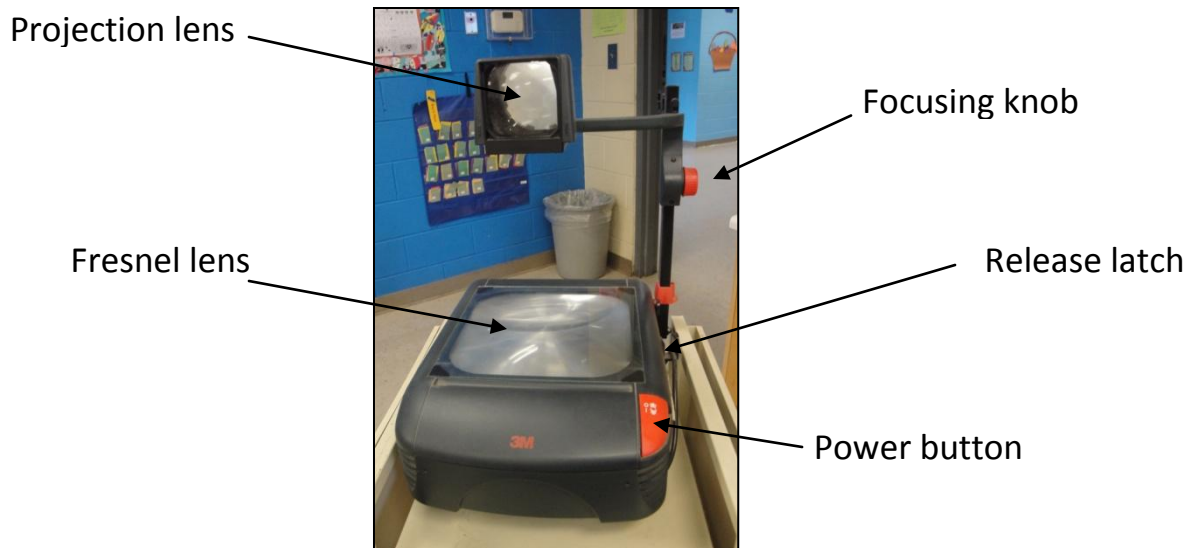

## Changing the bulb

**3M PART NUMBER: 78-8011-1186-1 (82V ENX 360W)**

1. Unplug the device.
2. Allow the device to completely cool.
3. Press the release latch to open the base.

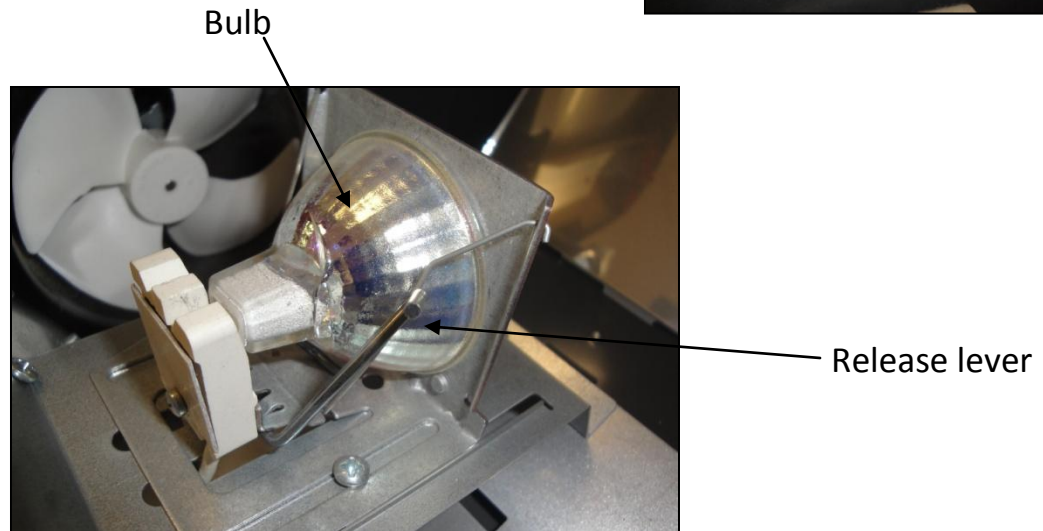

4. Pull the release lever.
5. Gently lift bulb from projector.
6. Gently replace bulb.
  - a. Assure bulb is well set into the socket.
  - b. Move lever forward to secure.
7. Close base.
8. Plug in power cord.
9. Turn on device.

