

REPLACING A BULB IN AN LED PROJECTOR

CHANGING THE BULB

Unplug the projector before beginning work.
If the projector has been running,
allow the fan to cool the unit before unplugging.

Turn the projector upside down
on a stable work surface.




Unscrew the USER SERVICE SCREW.



Gently open the cover plate.




Remove the screws that secure the bulb in place.
Carefully set these screws aside;
they will be needed to reinstall the new bulb.

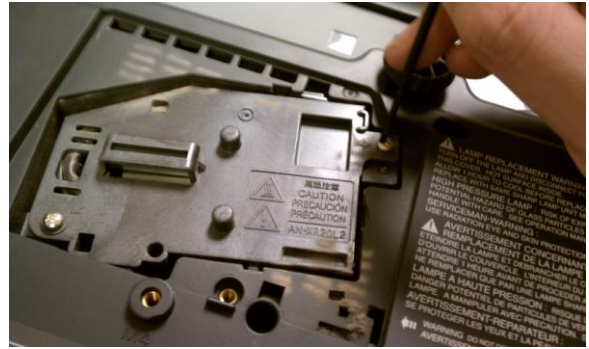

Gently, but firmly,
pull the bulb housing up
and out of the projector.



Carefully place the new bulb into the projector.

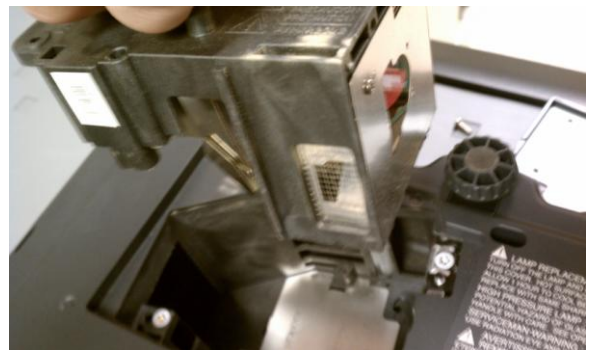

Using the screws set aside previously
(or new screws if they were shipped with the bulb),
secure the new bulb housing in the projector.



Replace the cover plate.



Tighten the USER SERVICE SCREW.



Turn the projector right-side up
and reconnect the power cord.

Power on the projector to check operation.